

CARE INSTRUCTIONS

Wipe the parts with a dry cloth or a damp cloth soaked in warm water. Use only soft cloth for wiping and polishing, never sponges or steel wool. Do not use abrasive household cleaners. Do not use acidic or alkaline cleaning materials, glass cleaner or household ammonia.

TROUBLESHOOTING

If lamp does not light, turn off the power. Check the bulb for a broken filament. Replace bulb if necessary, then turn it on. If the lamp still does not light, please contact customer service at the local dealer. If the external flexible cable or cord of this lamp is damaged, it must be replaced by a qualified electrician in order to avoid a hazard.

TECHNICAL INFORMATION

Light sources: E26, 3 x 1100 Lumen (~10-12W LED Dimmable).
Max power: With LED you can improve light output to 1530 Lumen (~13-16W).

Only dimmable light bulbs work properly.
Turn power off when changing light bulb. Isolation class II. The lamp is not approved for outdoor use or use in damp/wet rooms (IP20).

For enquiries contact GUBI A/S - CVR: 17940384
Klubiensvej 7-9. 2150 Nordhavn. Copenhagen, Denmark
T +45 69 15 60 60 – order@gubi.com
GUBI.COM


69-20-008-03 Assembly Instructions Gravity Floor Lamp XL - High US.

GUBI

ASSEMBLY INSTRUCTIONS

for

Gravity Floor Lamp XL - High

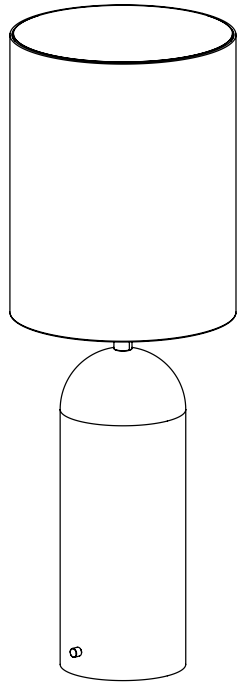


GUBI

ASSEMBLY INSTRUCTIONS

CONTENTS

GRAVITY FLOOR LAMP XL - HIGH

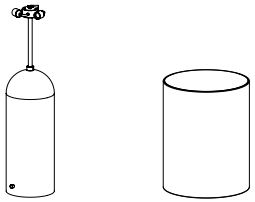


x1

x1


1.

Unpack the lamp and place on stable ground.

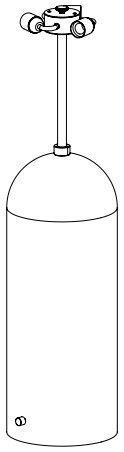


2.

Insert light bulbs.

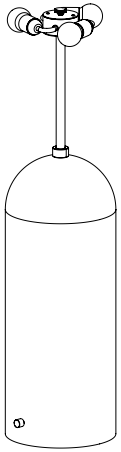


3.

Remove top screw.

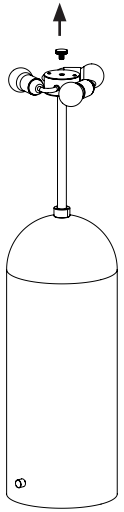


4.

Place shade on lamp and replace top screw.

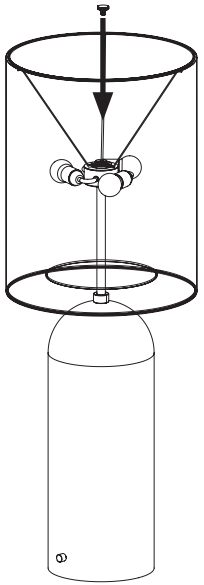

5.

Place top diffuser on lamp.

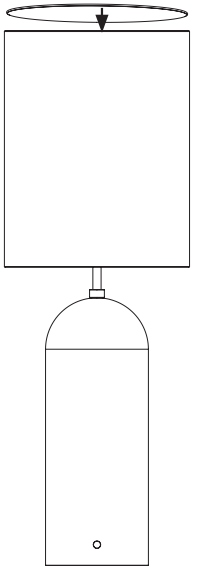

6.

Rotate button to turn lamp on and off, and dim up and down.

